

Toyota LC200 4.8 D4-D 2008

1. Find plug for rail pressure sensor. Disconnect it and connect box adapter between.

