


Audi A4 B9 2.0 TFSI 252HP

1. Box type: VT401200-040.
2. Find plugs for intake pressure sensors. Disconnect them and connect box adapters between.

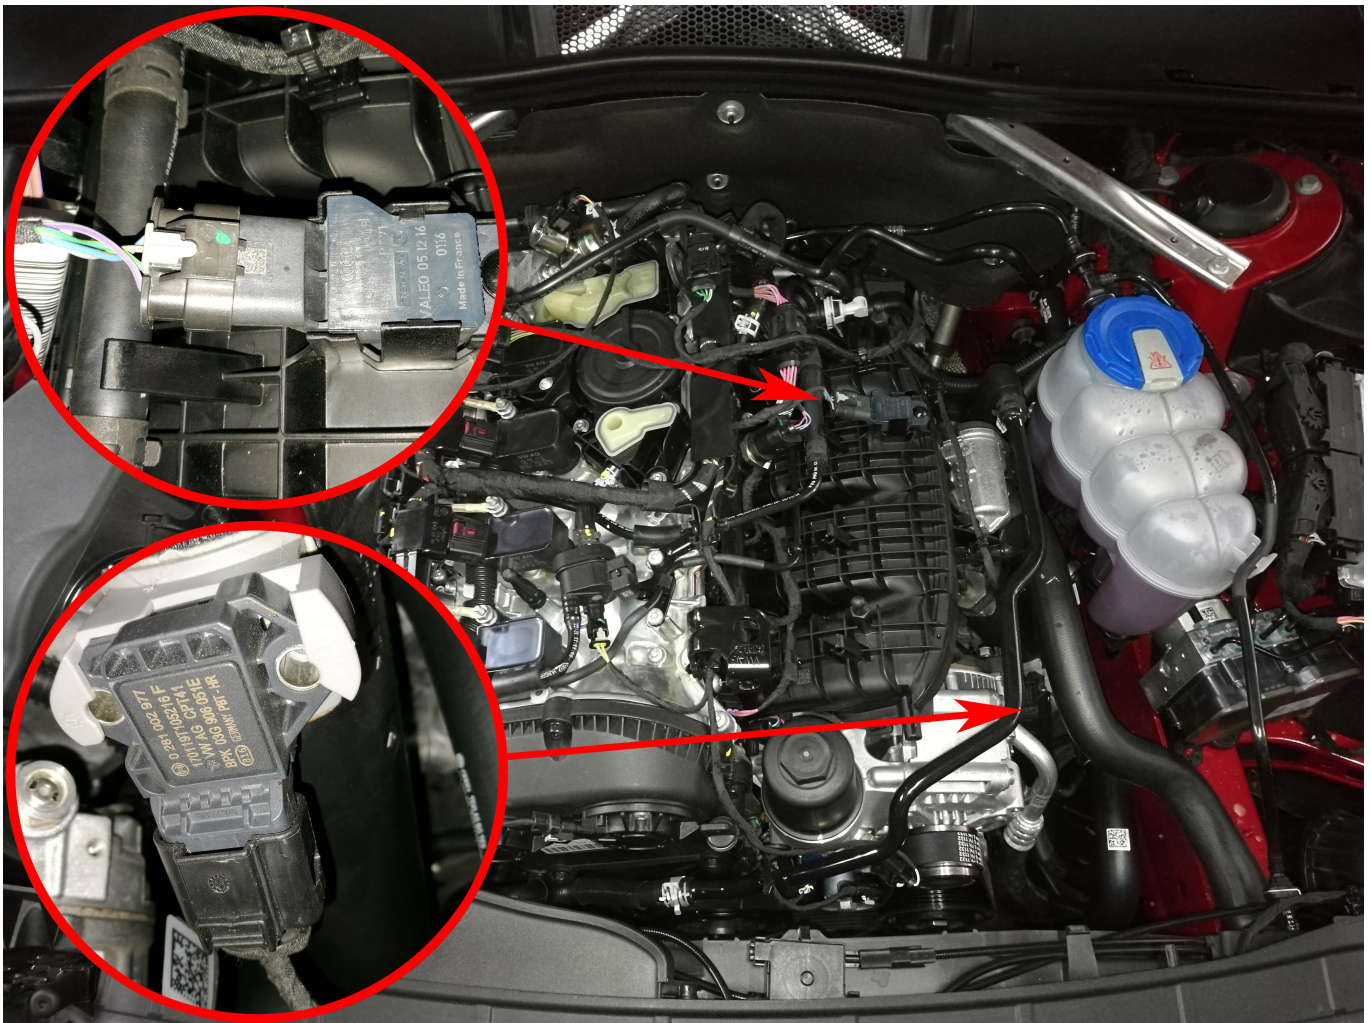

3. If box is equipped with yellow-red wire connect it to positive terminal in an engine compartment.