


## Ford Transit 2.0 TDCi 105HP 130HP 170HP

Box type: VT401205.




1. Remove air filter housing.

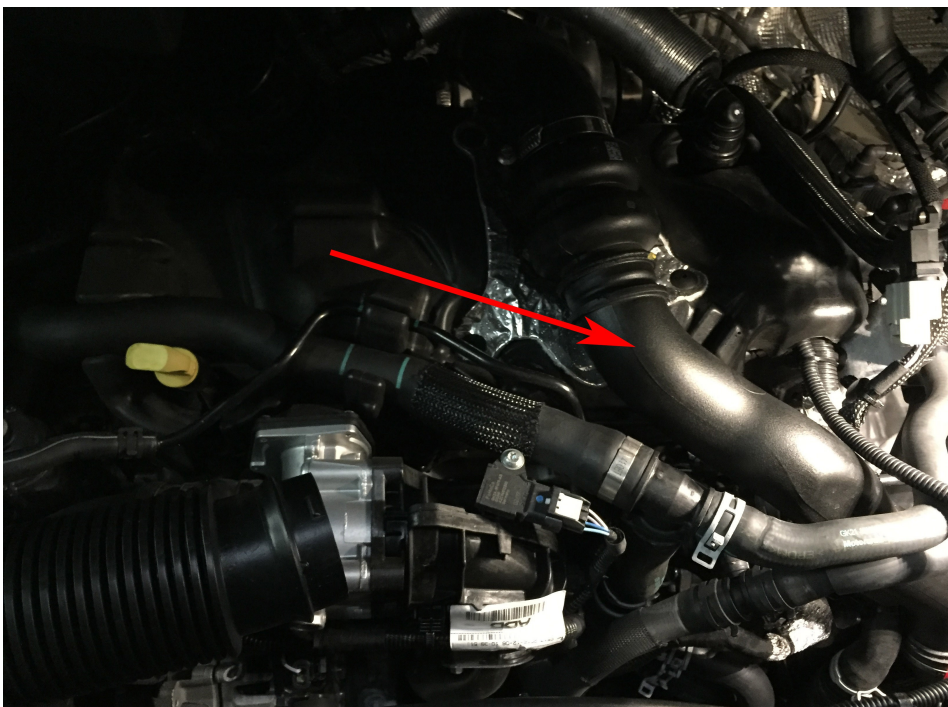


2. Remove air pipe.



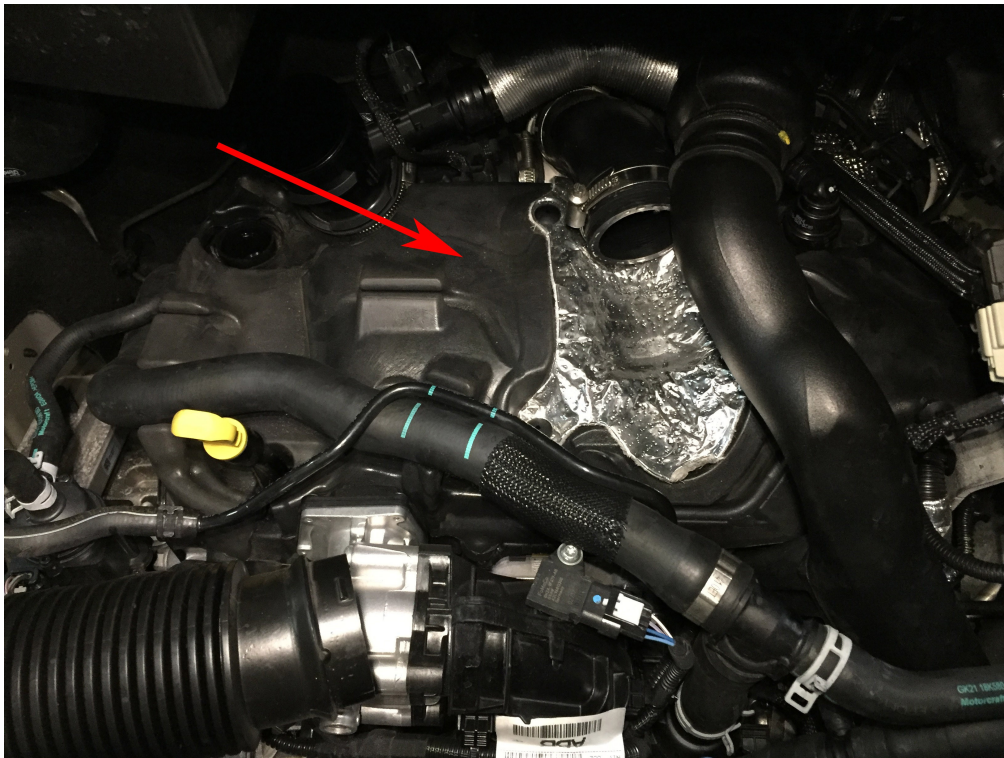

3. Remove noise insulation.

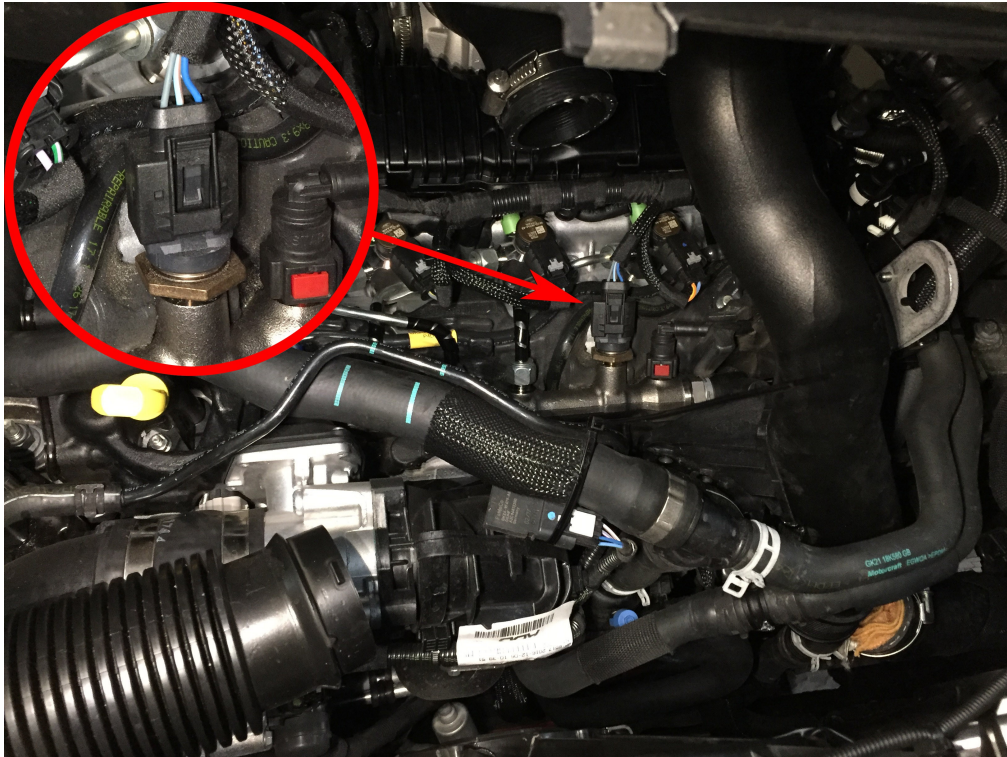

4. Find plug for rail pressure sensor. Disconnect it and connect box adapter between.
5. Install noise insulation, air pipe and air filter housing.
6. If box is equipped with yellow-red wire connect it to positive terminal in an engine compartment.