


Renault Captur 0.9TCe 90HP

1. Box type: VT401200-005.
2. Find plugs for manifold pressure sensors. Disconnect them and connect box adapters between.

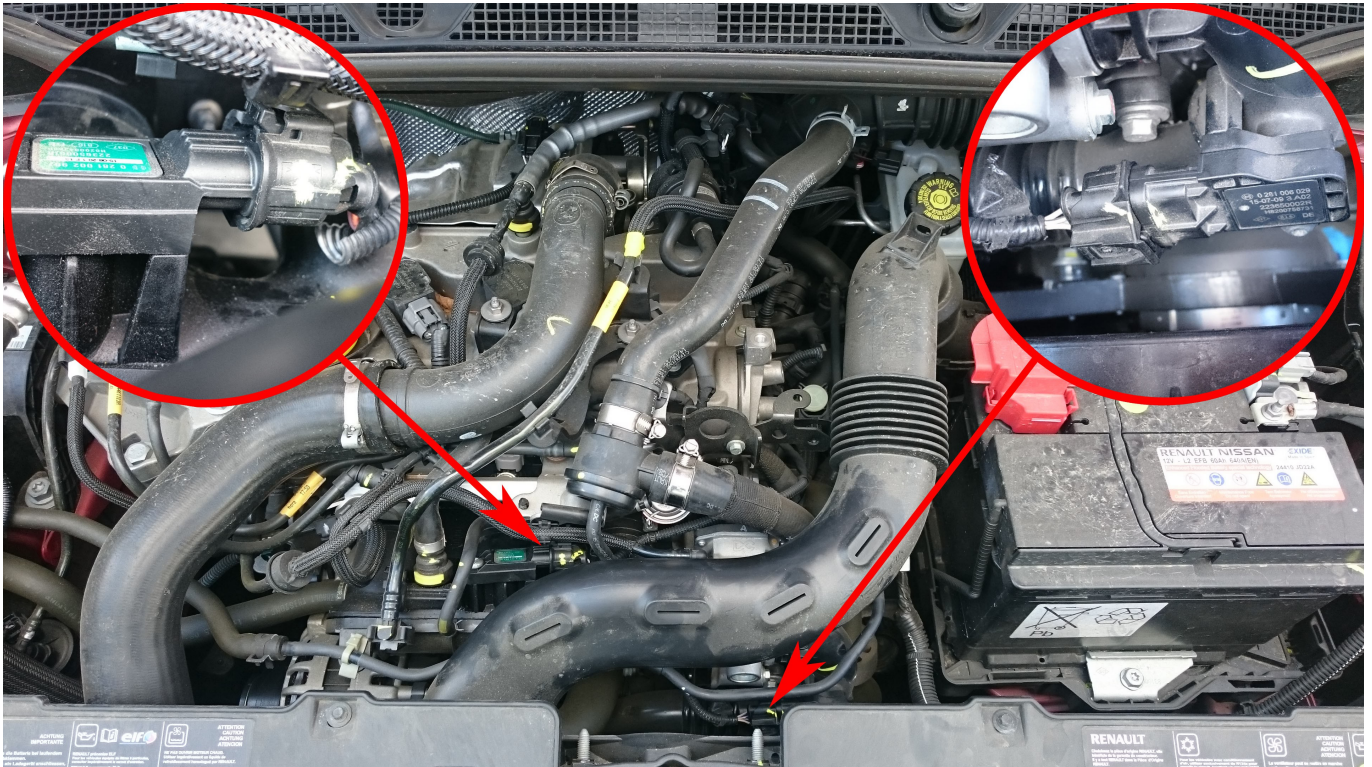

3. If box is equipped with yellow-red wire connect it to positive terminal in an engine compartment.