


Skoda Superb 2.0 TDI 170HP

1. Box type: VT301200-001.
2. Find plug for rail pressure sensor. Disconnect it and connect box adapter between.
3. Find plug for manifold pressure sensor. Disconnect it and connect box adapter between. It's easy to access from the bottom of the engine after removing lower engine dust shield.

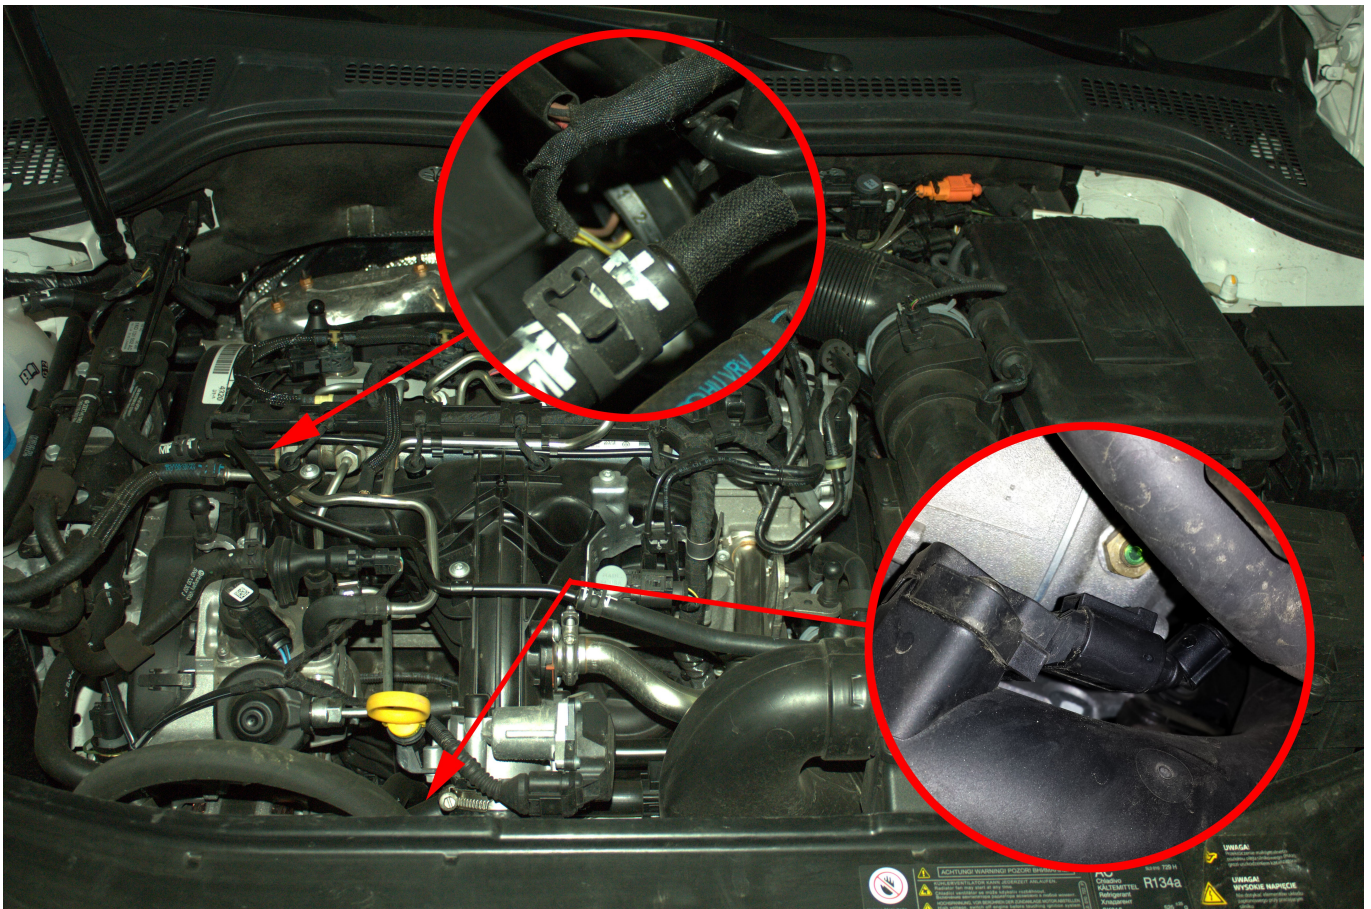

4. Connect yellow-red wire to positive terminal of battery.

