


VW Touareg 2.5 TDI PD

1. Box type: VT101303.
2. Find plug for injector harness. Disconnect it and connect box adapter between.

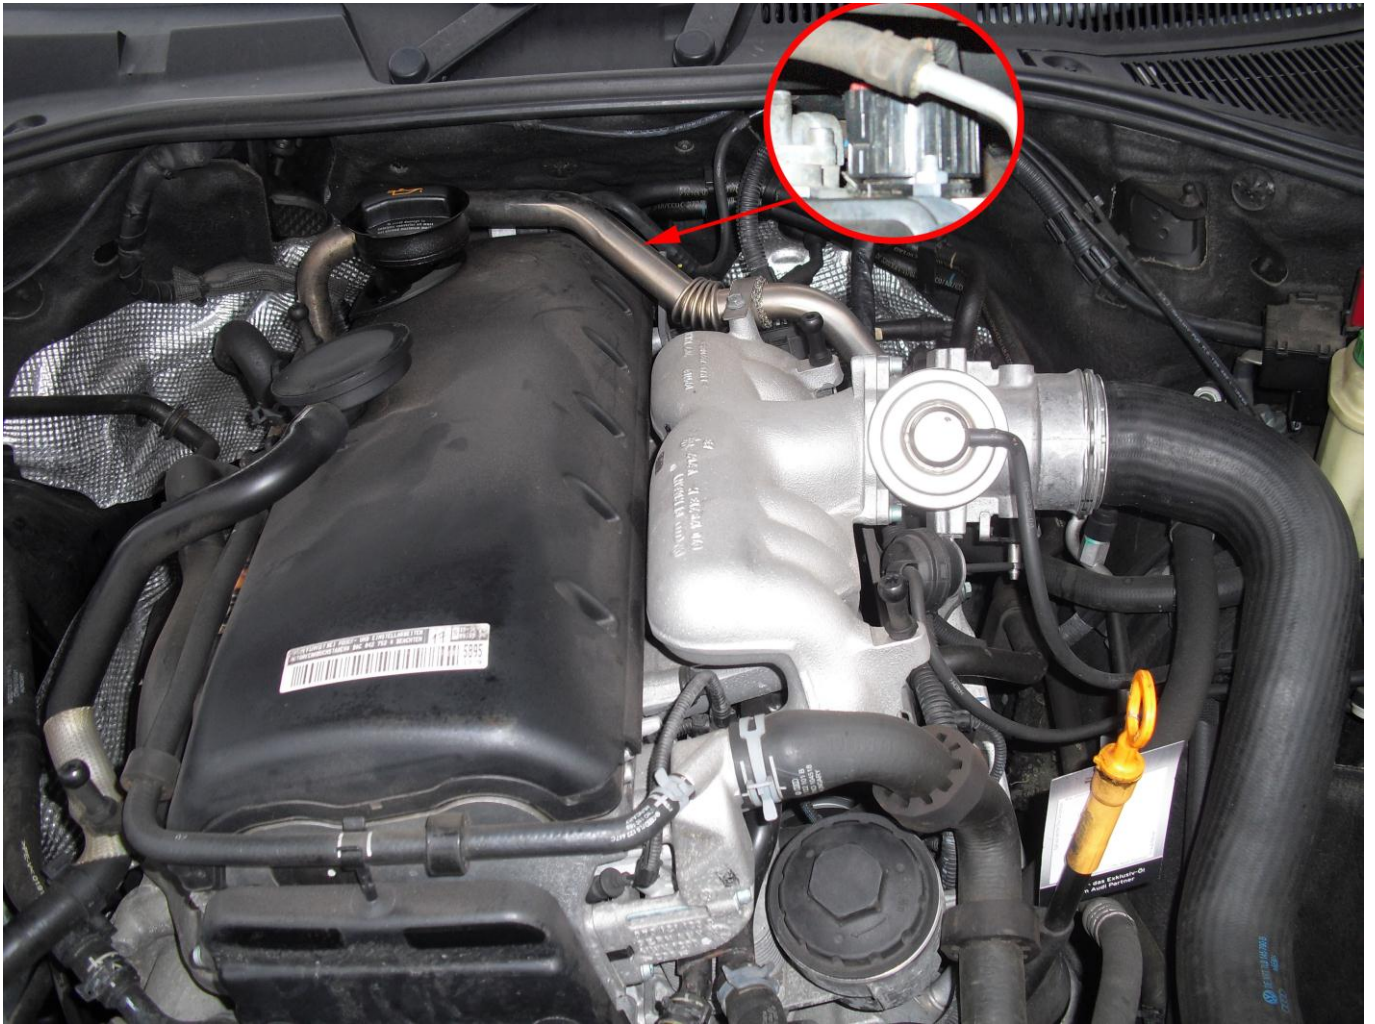

3. Connect black (-) and red (+) wires to battery or battery leads.

